

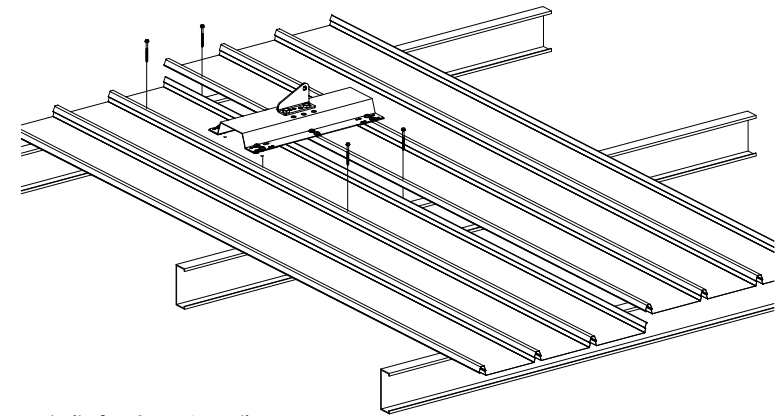
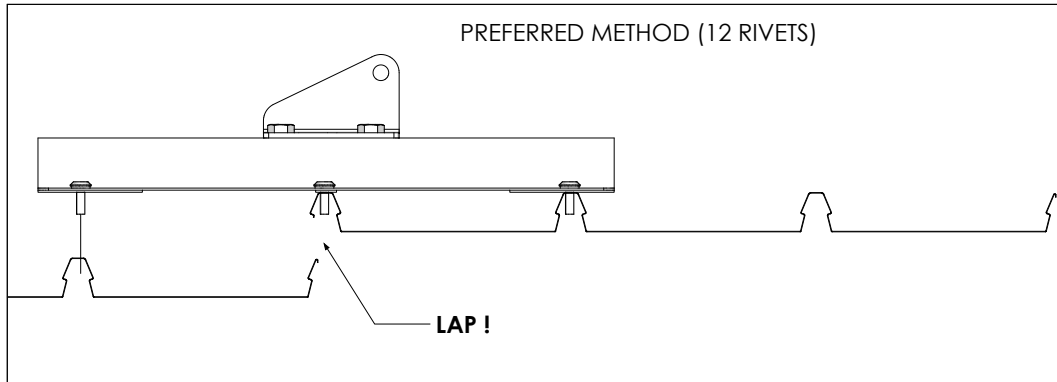


## ANCHOR PLATE FIXED WITH RIVETS ONLY CLIP-FIX TYPE ROOFS

IT IS MOST IMPORTANT TO ENSURE ANCHOR IS RIVETED CORRECTLY IN RELATION TO THE LAP.  
ALWAYS ENSURE ROOF SHEET DELAMINATION WILL NOT OCCUR.

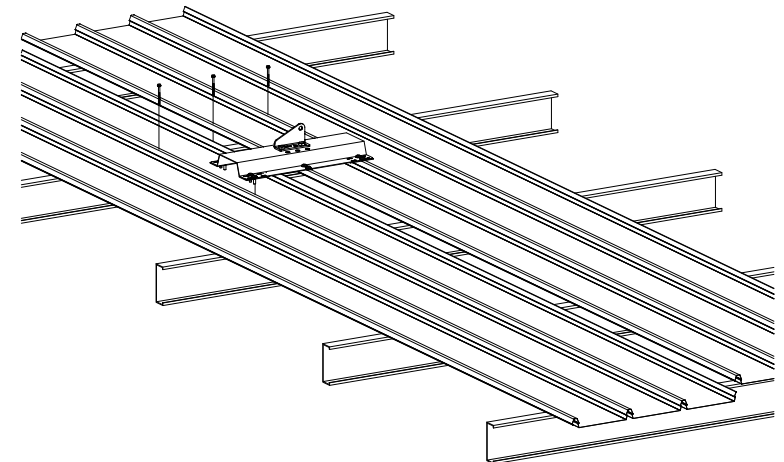

Details for 3 or 4 purlins  
Min 4 Fixings into purlins - Fixings into purlin above and below anchor plate

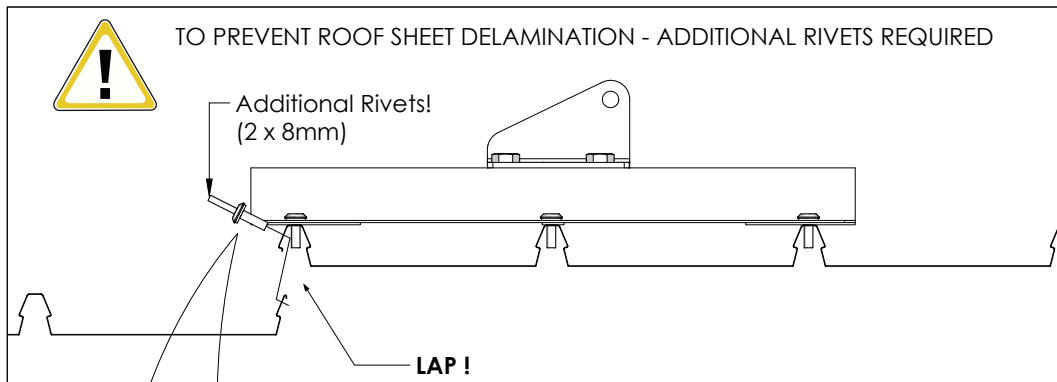

5-9 purlins - 3 Fixings into purlin above or below anchor plate (Into closest purlin)  
10+ Purlins - No additional fixings required unless anchor plate is less than 2m from the end of a roof sheet.

