
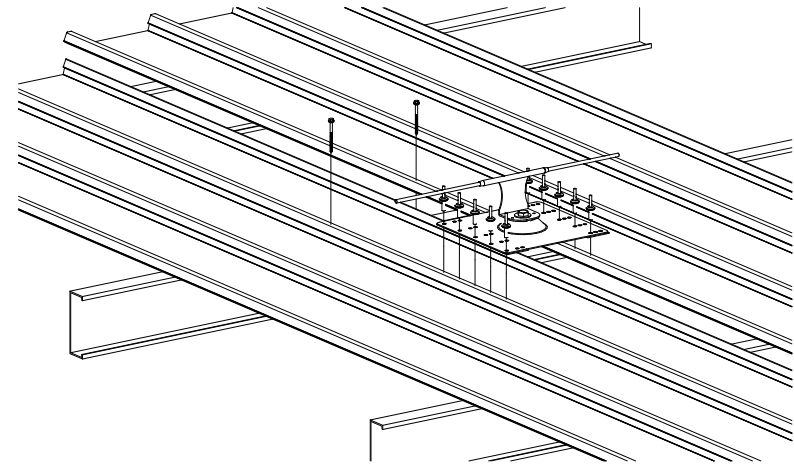
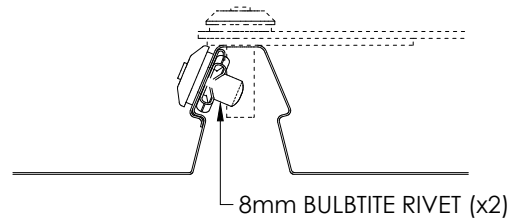
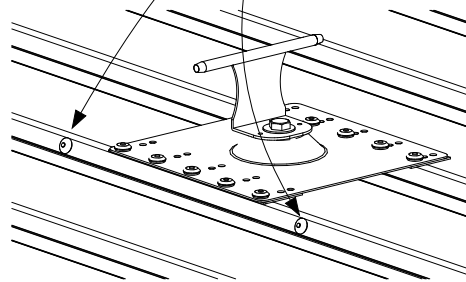
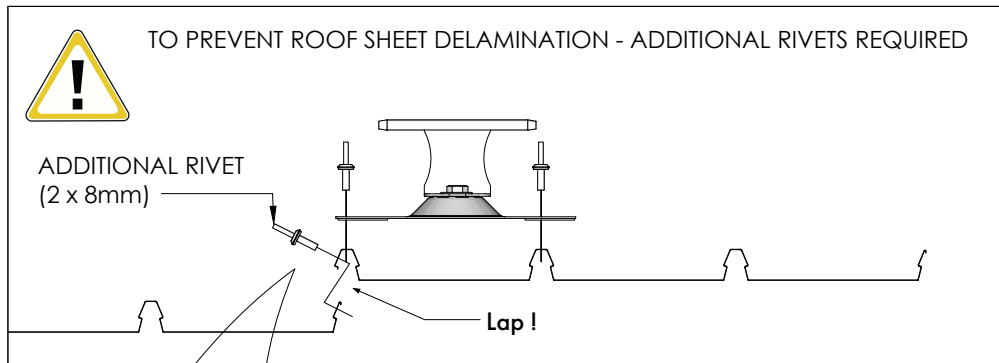


INTERMEDIATE FIXINGS WITH RIVETS ONLY CLIP-FIX TYPE ROOFS

IT IS MOST IMPORTANT TO ENSURE ANCHOR IS RIVETED CORRECTLY IN RELATION TO THE LAP.
ALWAYS ENSURE ROOF SHEET DELAMINATION WILL NOT OCCUR.

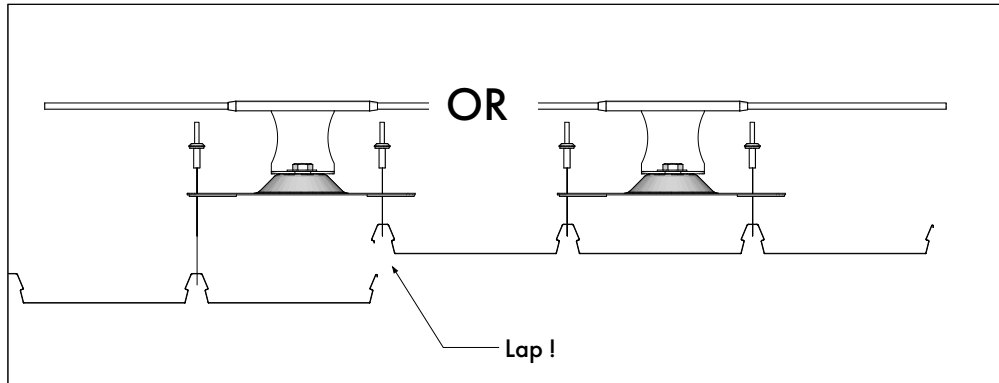

Details for 3 - 9 purlins
2 x 14G Fixings into purlin above OR below anchor plate

10+ Purlins - No additional fixings required unless
anchor plate is less than 2m from the end of a roof sheet.